


TANK ALARMS AND OVERFILL PREVENTION
Overfill Prevention Devices

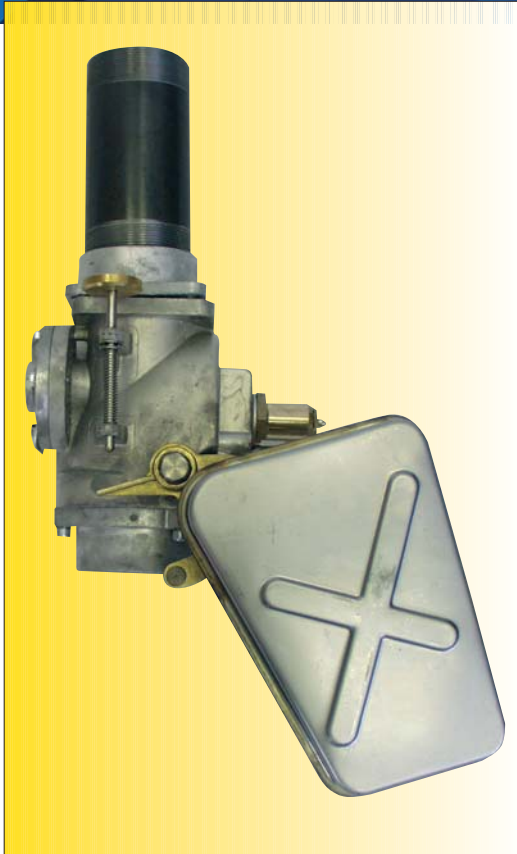

SOLO 3" OVERFILL PREVENTION VALVE

OPERATION

CONNECT THE HOSE FROM THE FUEL TANKER. ONCE IN PLACE, THE TANKER WILL DELIVER FUEL UNTIL THE OVERFILL PREVENTION VALVE SHUTS OFF. THIS WILL HAPPEN AUTOMATICALLY.

THE FUEL TANKER WILL THEN STOP DELIVERING FUEL.

AFTER A MINUTE, THE OVERFILL PREVENTION VALVE WILL REOPEN SO THE TANKER DRIVER CAN THEN DISCONNECT AND DRAIN THE HOSE.

- MAXIMUM FLOW RATE: 60M³/H - 1000 LITRES/MIN
- MINIMUM FLOW RATE: 2.4 M³/H - 40 LITRES/MIN
- MAXIMUM PRESSURE: 8 BAR -110 PSI
(OR AS PER LOCAL CODE)
- MINIMUM PRESSURE: 150 MBAR - 15KPA - 2.17 PSI
- RE-OPENING/DRAINING TIME: LESS THAN ONE MINUTE
- EASY TO INSTALL: DIRECTLY UNDER MANHOLE COVER
- PRODUCTS: DIESEL, SUPER, UNLEADED
- SUITABLE FOR DIRECT OR REMOTE FILLINGS BY PUMP OR BY GRAVITY

FOR ABOVE GROUND OR UNDERGROUND STORAGE TANKS

	CODE
Solo 3" Overfill Prevention Valve	DN 30