
ACCESS85 is an electronic device designed to control a single fuel dispensing pump.




This Access85 pump controller is configured by default for a 15 minute pump run time, and controlled by the Start / Stop buttons.

Please refer to the main instruction manual for further configuration options.

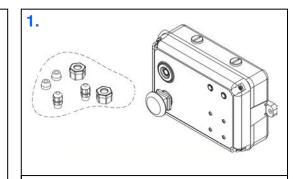

Site the Access85 in a well lit area and securely fix the casing.

Attach the rubber cable glands to the case. Power In at the TOP and Pump Out at the BOTTOM. Install only a single gland on the base if using the fuel level probe.

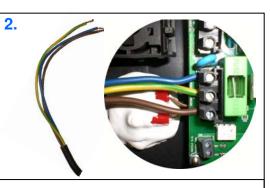

Remove the pump supply cable from the terminal box or isolator, strip back the outer sleeve to leave extra long connection cables and wire into the Access85 marked **MOTOR OUT 230v** noting the location of the Live, Neutral and Earth connections.

5.


Always read the instruction manual before beginning installation.



Isolate mains supply before working on any equipment.



This Access 85 must be installed by a competent person observing all safety precautions and installed to all local applicable regulations.

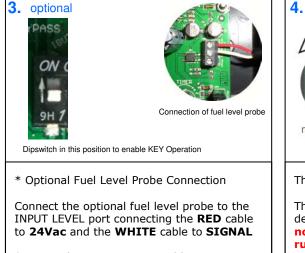

* Optional Key Operation enabling


Move the DIP Switch Number 1 downwards as shown above to **enable** the key operation function.



The timer is defaulted to 15 mins.

This can be adjusted by turning the screw depending upon your application. However note that vane style pumps should not run in bypass conditions for more than 2-3 mins.

The operator will either press the STOP button after refuelling or the pump will time-out.

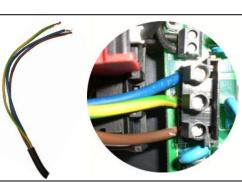

Connect new power supply cable to Access85 using correct size and type for the application. Strip back the outer sleeve to leave extra long connection cables and wire into the Access85 marked **IN 230v** noting the location of the Live, Neutral and Earth connections.

Turn on the power and ensure that the Emergency Stop button is in the open position by twisting clockwise. The Green power light should now be illuminated.

Quick Start Installation Guide for your Access85 Pump Controller



Quick Start Installation Guide for your Access85 Pump Controller